
## **Technical Data Sheet.**



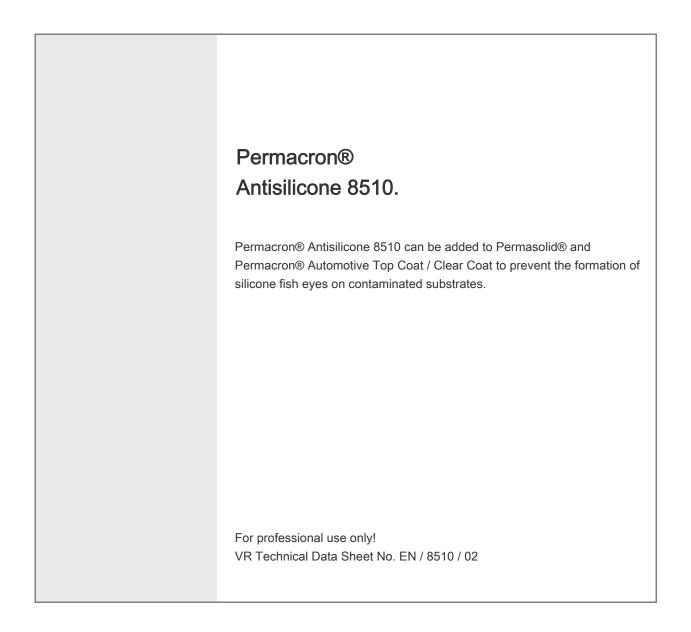

An Axalta Coating Systems Brand

## Field of application.

Additive for:	Permasolid® and Permacron® 2K acrylic resin Automotive Top Coats / Clear Coats, to prevent the formation of silicone fish eyes.
Use:	If fish eyes appear when the painter starts spraying the Automotive Top Coat / Clear Coat, Permacron® Antisilicone 8510 is added to the ready-to-spray mixture.
Dosage:	Add 1 cap = 25 ml (5%) Permacron® Antisilicone 8510 to 500 ml ready-to-spray Automotive Top Coat / Clear Coat and mix in well.
Special notes:	Antisilicone is not recommended as a preventive measure.
	Overspray from a top coat mixed with antisilicone must not come into contact with other surfaces which are still to be painted.
	Thoroughly clean equipment immediately after use.
	Destroy empty tins immediately.
Note on safety:	This product is classified according to regulation (EC) 1272/2008 (CLP). Please consult the Safety Data Sheet. It is strongly recommended to use appropriate personal protection equipment during application.
Data.	
Flash point:	+23 °C

The information provided in this documentation has been carefully selected and arranged by us. It is based upon our best knowledge on the subject at the date of issuance. The Information is given for information purposes only. We are not liable for its correctness, accuracy and completeness. It is up to the user to check the information with regard to up-to-dateness and suitability for his intended purpose. The intellectual property in this Information, including patents, trademarks and copyrights, is protected. All rights reserved. The relevant Material Safety Data Sheet and Warnings displayed on the product label need to be observed. We may modify and/ or discontinue operation of all or portions of this Information at any time in our sole discretion, without notice and assume no responsibility to update the Information. All rules set forth in this clause shall apply accordingly for any future changes and amendments.

Axalta Coating Systems Germany GmbH Horbeller Straße 15 D-50858 Köln

Phone +49 (0) 2234 / 6019 - 06 Fax +49 (0) 2234 / 6019 - 4100 www.spieshecker.com

